

## How to Update a 99A Control for 2007 Daylight Savings Time

In order to update your 99A control for the 2007 DST rules you **must change the time** on the control, and verify the date. This will have to be done 4 times a year to maintain your clock's accuracy. A new EPROM is available for your controller by calling Electric Time Company, Inc.

To access the many functions of the 99A control you must first unlock the unit. This is done by pressing the "\*" key and the "1" key at the same time. The display will then read "-unlocked-".

Once you are done using the control press the "\*" and the "1" key again to re-lock the control.

To access the menu once you have unlocked the control press the "\*" key to page through the functions and press the "#" key to access a function.

## How to set the time:

- a) Unlock the controller.
- b) Press the "\*" key once, the display will read "set:TIME".
- c) Press the "#" key to enter this function. The time on the control will be displayed "12:00 PM".
- d) Use the numbers on the key pad to enter the current time.
- e) Use the "#" key to flip between AM and PM.
- f) Press the "\*" key when done and the control will read "sync sec", and the clock ('s) will reset automatically.

## How to set the date:

- a) Unlock the controller.
- b) Press the "\*" key twice, the display will read "set:DATE".
- c) Press the "#" key to enter this function. The date on the control will be displayed "01/19/1973".
- d) Use the numbers on the key pad to enter the current date.
- e) Use the "#" key to change the day if needed.
- f) Press the "\*" key when done and the control will read "date set", and the clock ('s) will reset automatically.

## How to set the hands:

- a) Unlock the controller.
- b) Press the "\*" key until the display will read "set:HANDS".
- c) Press the "#" key to enter this function. The date on the control will be displayed "enter positions of hands:".
- d) Use the numbers on the key pad to enter the current positions of the clock hands. This should be the wrong time and once the last second has been entered the control will blink, reconfigure, and reset the clock ('s) automatically.

If you encounter any problems please contact us Electric Time Company, Inc. for further support.